


Hydraulic or Electro-hydraulic Directional Valve

Model: WEH/WH...5X

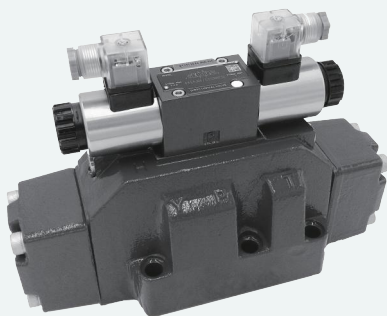

- ◆ Size 10~32
- ◆ Maximum working pressure 350 bar
- ◆ Maximum working flow 1100 L/min

Contents

Function description, sectional drawing	02 - 04
Models and specifications	05
Functional symbols	06-08
Technical parameters	09-10
Characteristic curve	11-13
Characteristic limit	11-13
Switching time adjustment, pressure reducing valve and pre-load valve	14
Component size	15-20

Features


- Mainly used to control the opening, closing and direction of liquid flow
 - Electro-hydraulic operation (WEH)
 - Hydraulic operation (WH)
 - Subplate mounting
- The mounting surface according to DIN24340 form A and ISO4401
- Spring or hydraulic centered
- Spring or hydraulic return to initial position
- Wet-pin DC or AC solenoid
- Optional manual emergency operation
- Individual or central electrical connection
 - Optional switching time adjustment
 - Optional pre-load valve in port P of the main valve
 - Auxiliary component, optional
- Stroke adjustment of main spool
 - Stroke adjustment or end position sensor
 - Inductive or mechanical limit switch (proximity type) of the main spool

Directional valve model WEH


The WEH directional valve is a directional spool valve with electro-hydraulic operation. It is used to control the opening, closing and direction of the liquid flow.

The valve mainly consists of valve body (1), main control spool (2), main valve with one or two reset springs (3.1) and (3.2), pilot valve (4) with one or two solenoids "a" (5.1) and "b" (5.2).

The main control spool is held in the neutral or initial position by the springs or pressure. For the valve with spring-centered, the two spring chambers (6) and (8) are connected to the oil tank through the pilot valve in the initial position. The pilot valve (4) is supplied with oil through the control line (7). The control oil can be supplied internally or externally (externally via port X). The main control spool (2) is hydraulically operated by the pilot valve (4). Due to the operating of the pilot valve on one end of the main control spool, the spool moves to the operation position, then the valve opens in the operation direction and the fluid flows from P to A and B to T or P to B and A to T. The control oil can be drained internally or externally. An optional manual emergency operation (9) can move the control spool (10) in the pilot valve (4) when the solenoid is not energized.

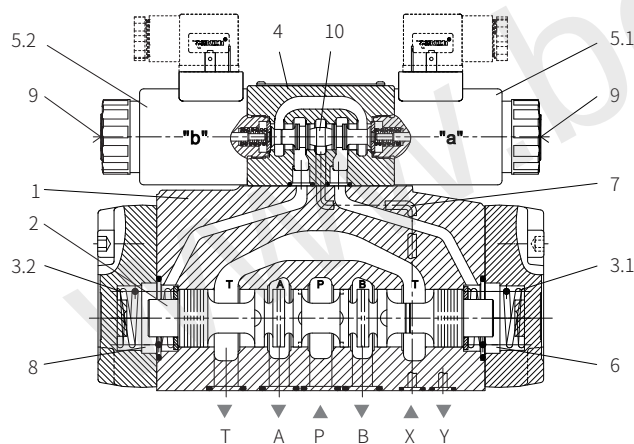

Directional valve model 4WEH.



Model 4WH...

Directional valve model WH

The WH directional valve is a hydraulically operated directional spool valve. It is used to control the opening, closing and direction of liquid flow.


The valve mainly consists of valve body (1), main control spool (2), one or two reset springs (3.1) and (3.2) with spring centered or spring return functions, and control cover (11).

The main control spool is operated by hydraulic directly. The spool is held in the neutral or initial position by springs or hydraulic pressure. The control oil is supplied and drained externally. For the 4/3-way valve with spool spring centered, the main control spool (2) is held in the neutral position by two centered springs. The two spring chambers (6, 8) are connected to the oil ports X and Y through the control cover (11). When one end of the main control spool (2) is pressurized, the spool moves to the working position, thereby connecting the corresponding oil circuit.

4/3-way directional valve with hydraulic centered of main valve, model WEH..H/

In this structure, the pressure oil acts on both end surfaces of the main control spool (2). The centering sleeve (10) locates the main control spool (2) and keeps it in the middle position.

If one end of the main control spool (2) is unloaded, the main control spool (2) moves to the working position under the pressure from the other end, thereby changing the direction of the oil flow. The unloaded control spool face displaces the returning pilot oil into port Y externally through the pilot valve (4). The oil is drained internal from port L to the tank directly.

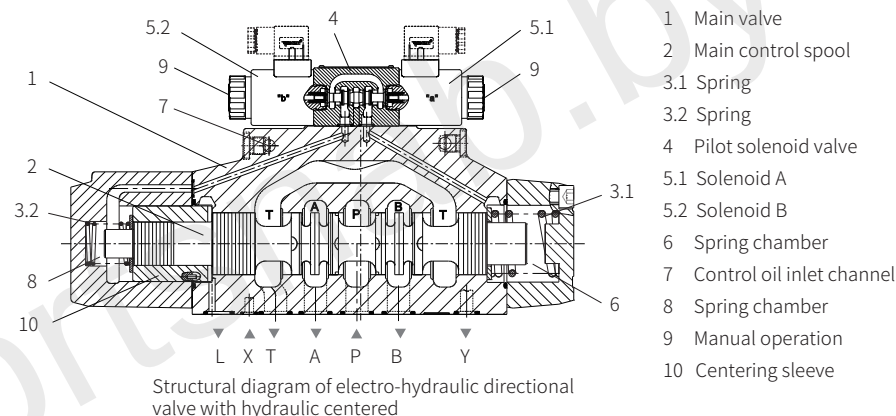


● Model WEH16

◆ Internal supply and drain:


The small end of pin (4) on the top of the main valve is installed toward to the end cover without plug (5).

◆ External supply and drain:


The large end of pin (4) on the top of the main valve is installed toward to end cover with plug (5).

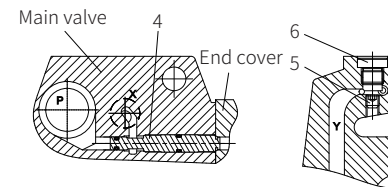

structure diagram of model WEH16...5XJ/
supply and drain




The channel T on the top of the main valve with M6 screw (12) is external drain and is internal drain when M6 screw (12) dismounted.




Models and specifications

	4				/			/		*
working pressure to 35MPa	=no code									more information in text
four-way version	=4									sealing material No code= NBR seals V= FKM seals (consult for other seals)
operation type electro-hydraulic hydraulic control	=WEH =WH									No code= without pressure reducing valve D3= with pressure reducing valve
size size 16 size 25 size 32	=16 =25 =32									pre-load valve No code= without pre-load valve P4.5= with pre-load valve, cracking pressure 0.45MPa
main valve hydraulic return or centered main valve spring return or centered	=H =No code									No code= no plug-in throttle B08= throttle Ø0.8mm B10= throttle Ø1.0mm B12= throttle Ø1.2mm B15= throttle Ø1.5mm
functional symbols (see functional symbol diagram) 50 to 59 series	 =5X									additional device number (see additional device drawing)
when the pilot valve is a 2-position valve with two solenoids and hydraulic return in the main valve without reset spring without reset spring with detent	 =O =OF								K4=	electrical connection no insert plug
pilot valve with wet-pin solenoid with threaded connection	=6E									No code= without switching time adjustment S= switching time adjustment as meter-in control S2=switching time adjustment as meter-out control
DC voltage 24V AC voltage 220V, 50Hz/60Hz for other voltages and frequencies, see directional valve WE6	=G24 =W220									pilot oil supply No code= pilot oil supply and drain external E= pilot oil supply internal and drain external ET ¹⁾ = pilot oil supply and drain internal T= pilot oil supply external and drain internal (for model 4WH...only available as "no code") (the 3-position valve with hydraulic centered in ET and T types must meet: P pilot ≥ 2xP tank + P pilot min)
1) For internal oil supply *Minimum control pressure: see page 231 *To avoid impermissible maximum force peaks, a throttle (B10) must be installed in port P of the pilot valve 2) Only in conjunction with throttle "B10"										No code = without manual emergency operation N9= with hidden manual emergency operation


Detailed and simplified symbols for 3-position directional valves

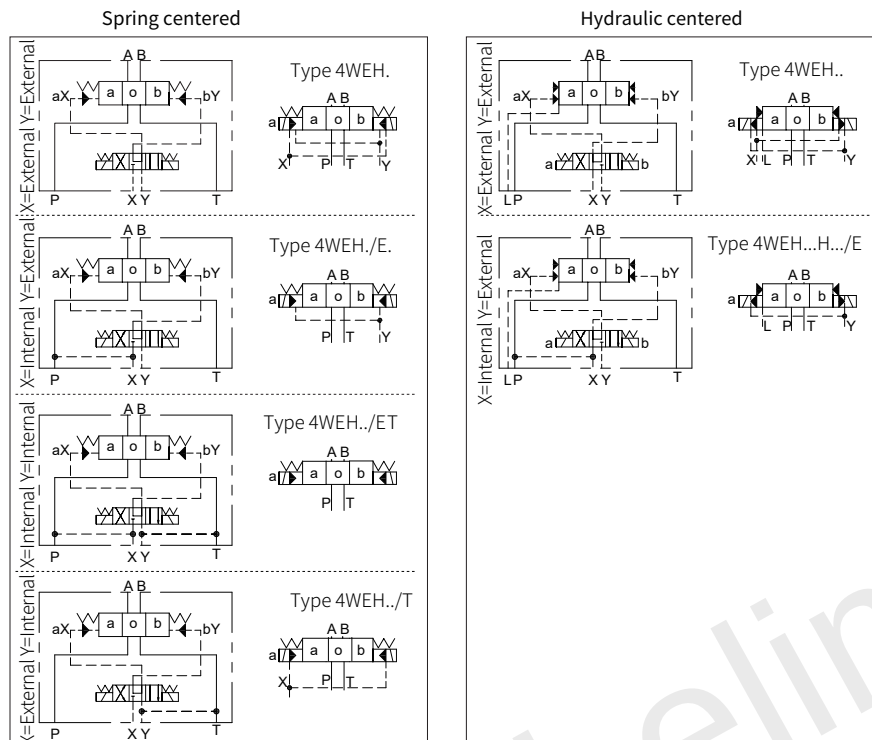

Spring return valves
(the solenoid at end A or B of the 2-position valve derived from the 3-position valve)

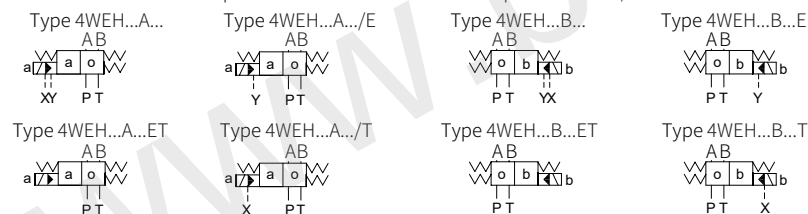

Hydraulic return valves
(the solenoid at end A or B of the 2-position valve derived from the 3-position valve)



Functional symbols of 3-position valves

3-position valve

3-position valve model	Functional symbol	Transition function
4WEH...E.../... E		
4WEH...F.../... F		
4WEH...G.../... G		
4WEH...H.../... H		
4WEH...J.../... J		
4WEH...L.../... L		
4WEH...M.../... M		
4WEH...P.../... P		
4WEH...Q.../... Q		
4WEH...R.../... R		
4WEH...S.../... S		
4WEH...T.../... T		
4WEH...U.../... U		
4WEH...V.../... V		
4WEH...W.../... W		

2-position valve derived from 3-position valve

2-position valve model	Functional symbol	2-position valve model	Functional symbol
4WEH...EA.../... (Solenoid at end A)		4WEH...EB.../... (Solenoid at end B)	
4WEH...FA.../... (Solenoid at end A)		4WEH...FB.../... (Solenoid at end B)	
4WEH...GA.../... (Solenoid at end A)		4WEH...GB.../... (Solenoid at end B)	
4WEH...HA.../... (Solenoid at end A)		4WEH...HB.../... (Solenoid at end B)	
4WEH...JA.../... (Solenoid at end A)		4WEH...JB.../... (Solenoid at end B)	
4WEH...LA.../... (Solenoid at end A)		4WEH...LB.../... (Solenoid at end B)	
4WEH...MA.../... (Solenoid at end A)		4WEH...MB.../... (Solenoid at end B)	
4WEH...PA.../... (Solenoid at end A)		4WEH...PB.../... (Solenoid at end B)	
4WEH...QA.../... (Solenoid at end A)		4WEH...QB.../... (Solenoid at end B)	
4WEH...RA.../... (Solenoid at end A)		4WEH...RB.../... (Solenoid at end B)	
4WEH...SA.../... (Solenoid at end A)		4WEH...SB.../... (Solenoid at end B)	
4WEH...TA.../... (Solenoid at end A)		4WEH...TB.../... (Solenoid at end B)	
4WEH...UA.../... (Solenoid at end A)		4WEH...UB.../... (Solenoid at end B)	
4WEH...VA.../... (Solenoid at end A)		4WEH...VB.../... (Solenoid at end B)	
4WEH...WA.../... (Solenoid at end A)		4WEH...WB.../... (Solenoid at end B)	


www.belimportsna.by

Technical parameters

01

Switching time (refers to the time from the solenoid closing to the main valve fully opening.)															
Size 16	Switching time for valve from neutral position to operating position (for DC (=) and AC (~) operation)														
	at pilot pressure		(MPa)		~7=				~15=		~25=				
	3-position valve-spring centered		(ms)		25...30		40		25...30		40				
	2-position valve		(ms)		30...35		55		30...35		55				
	3-position valve		Solenoid operated		a	b	a	b	a	b	a	b			
	-hydraulic centered		(ms)		30	30	40	40	30	30	40	40			
	Switching time for valve from operating position to static position														
	3-position valve		(ms)		20 to 35 for ~; 30 for =										
	2-position valve		(ms)		30...50		45		30...50		45				
3-position valve		From-		a	b	a	b	a	b	a	b	a	b		
-hydraulic centered		(ms)		20...35	20	20...55	20	20...35	20	20...35	20	20			
Size 25	Switching time for valve from neutral position to operating position (for DC (=) and AC (~) operation)														
	at pilot pressure		(MPa)		~7=				~14=		~21=		~25=		
	3-position valve-spring centered		(ms)		50		85		40		75		35		
	2-position valve		(ms)		120		160		100		130		85		
	3-position valve		Solenoid operated		a	b	a	b	a	b	a	b	a	b	
	-hydraulic centered		(ms)		20	35	55	65	30	35	55	65	25	30	
	Switching time for valve from operating position to static position														
	3-position valve		(ms)		40 to 55 for ~; 40 for =										
	2-position valve		(ms)		120		125		85		100		85		
3-position valve - hydraulic centered		From-		a	b	a	b	a	b	a	b	a	b		
		(ms)		30...50	30	35	30...50	30	35	30...50	30	35	30...50	30	35
Size 32	Switching time for valve from neutral position to operating position (for DC (=) and AC (~) operation)														
	at pilot pressure		(MPa)		~5=				~15=		~25=				
	3-position valve-spring centered		(ms)		65		80		50		90		35		
	2-position valve		(ms)		100		130		75		100		60		
	3-position valve		Solenoid operated		a	b	a	b	a	b	a	b	a	b	
	-hydraulic centered		(ms)		55	35	100	105	40	45	85	95	35	40	
	Switching time for valve from operating position to static position														
	3-position valve		(ms)		60 to 75 for ~; 50 for =										
	2-position valve		(ms)		115...130		90		85...100		70		65...80		
3-position valve		From-		a	b	a	b	a	b	a	b	a	b		
-hydraulic centered		(ms)		30...65	30	40	60...90	30	40	105...155	50	50			

Characteristic curve

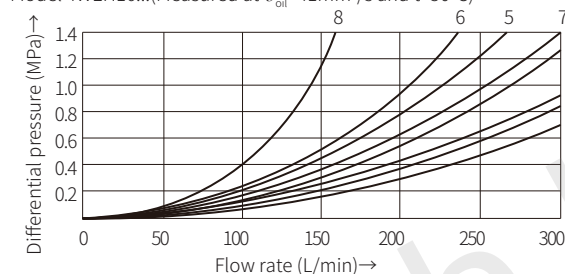Model 4WEH16...(Measured at $\vartheta_{oil}=41\text{mm}^2/\text{s}$ and $t=50^\circ\text{C}$)

Spool	Working position				
	P-A	P-B	A-T	B-T	P-T
E, D, Y	1	1	1	3	-
F, P	2	2	3	3	-
G, T	5	1	3	7	6
H, C, Q, V, Z	2	2	3	3	-
J, K, L	1	1	3	3	-
M, W	2	2	4	3	-
R	2	2	4	-	-
U	1	1	4	7	-
S	4	4	4	-	8

Characteristic limit

Model 4WEH16...(Measured at $\vartheta_{oil}=41\text{mm}^2/\text{s}$ and $t=50^\circ\text{C}$)

Allowable flow of 2-position valve (L/min)						
Spool	Working pressure(MPa)					
	7	14	21	28	35	
Main valve spring return ¹⁾						
C, D, K, Z, Y	300	300	300	300	300	
Main valve spring return ²⁾						
C	300	300	300	300	300	
D, Y	300	270	260	250	230	
K	300	250	240	230	210	
Z	300	260	190	180	160	
Main valve hydraulic return						
HC, HD, HK	300	300	300	300	300	
HZ, HY	300	300	300	300	300	

- 1) The given flow value can be achieved when the minimum pilot pressure of 1.2MPa exists.
- 2) The given flow value is limiting the value at which the reset spring can return the valve when the pilot pressure decreases.

Allowable flow of 3-position valve (L/min)						
Spool	Working pressure(MPa)					with pre-load valve and port internal supply
	7	14	21	28	35	
Main valve spring return ¹⁾						
E、H、J、L、MQ、U、W、R	300	300	300	300	300	
F、P	300	250	180	170	150	
G、T	300	300	240	210	190	
S	300	300	300	250	220	
V	300	250	210	200	180	
Pressure centered (minimum pilot pressure 1.6MPa)						Spools approx. to 160L/min
All spools	300	300	300	300	300	


Notice:

When using a 4/3-way valve with pressure centered in the main spool which exceeds the given performance limits, a higher pilot pressure is required. Therefore, if the pressure is 35MPa and the flow is 300L/min in the circuit, the pilot pressure of 1.6MPa is required.

The maximum flow of the valve only depends on the acceptable pressure drop through the valve.

01

Characteristic curve

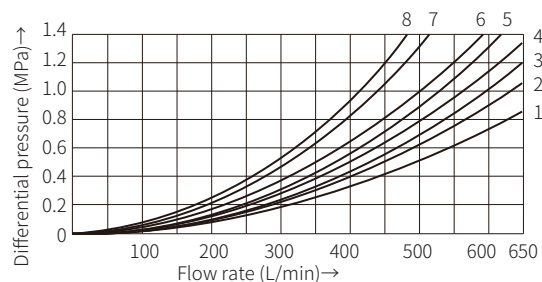Model 4WEH25...(Measured at $\vartheta_{oil}=41\text{mm}^2/\text{s}$ and $t=50^\circ\text{C}$)

Spool	Working position				Spool	Working position			
	P-A	P-B	A-T	B-T		P-A	P-B	A-T	B-T
E	1	1	1	3	P	4	1	1	5
F	1	4	3	3	Q	2	2	3	5
G	3	1	2	4	Z	1	1	1	-
H	4	4	3	4	U	2	1	1	6
J	2	2	3	5	V	4	4	3	6
L	2	2	3	3	W	1	1	1	3
M	4	4	1	4	T	3	1	2	4

Characteristic limit

Model 4WEH25...(Measured at $\vartheta_{oil}=41\text{mm}^2/\text{s}$ and $t=50^\circ\text{C}$)




Allowable flow of 2-position valve (L/min)						with pre-load valve and X port internal supply
Spool	Working pressure (MPa)					
	7	14	21	28	35	
Main valve spring return ¹⁾						
C, D, K, Z, Y	700	700	700	700	700	
Main valve spring return ²⁾						
C	700	700	700	700	700	
D, Y	700	650	400	350	300	
K	700	650	420	370	320	
Z	700	700	650	480	400	
Main valve hydraulic return						
HC, HD, HK	700	700	700	700	700	
HZ, HY	700	700	700	700	700	
HC.../O	700	700	700	700	700	
HD.../O	700	700	700	700	700	
HK.../O	700	700	700	700	700	
HZ.../O	700	700	700	700	700	
HC.../OF	700	700	700	700	700	
HD.../OF	700	700	700	700	700	
HK.../OF	700	700	700	700	700	
HZ.../OF	700	700	700	700	700	

Allowable flow of 3-position valve (L/min)						with pre-load valve and X port internal supply
Spool	Working pressure (MPa)					
	7	14	21	28	35	
spring centered						
E, L, M Q, U, W	700	700	700	700	650	
G/T	400	400	400	400	400	
F	650	550	430	330	300	
H	700	650	550	400	360	
J	700	700	650	600	520	
P	650	550	430	330	300	
V	650	550	400	350	310	
R	700	700	700	650	680	
Pressure centered (minimum pilot pressure 1.8MPa)						
E/F/H/J	700	700	700	700	650	
L/M/P/Q	700	700	700	700	650	
R/U/V/W	700	700	700	700	650	
G/T	400	400	400	400	400	
When the pilot pressure higher than 3MPa						
G/T	700	700	700	700	700	

1) The given flow value can be achieved when the minimum pilot pressure of 1.3MPa exists.

2) The given flow value is limiting the value at which the reset spring can return the valve when the pilot pressure decreases.

Characteristic curve

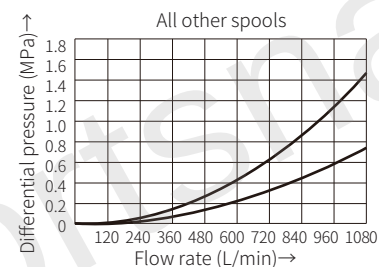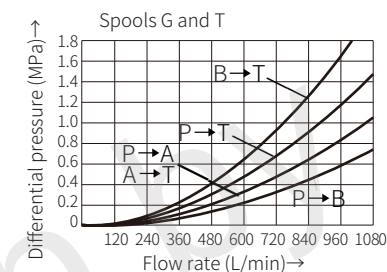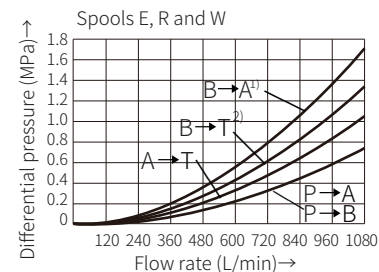Model 4WEH32...(Measured at $\vartheta_{oil}=41\text{mm}^2/\text{s}$ and $t=50^\circ\text{C}$)

- 1) Only for spool R
2) Not for spool R

Characteristic limit

Model 4WEH32...(Measured at $\vartheta_{oil}=41\text{mm}^2/\text{s}$ and $t=50^\circ\text{C}$)

Allowable flow of 2-position valve (L/min)						with pre-load valve and X port internal supply
Spool	Working pressure(MPa)					
	7	14	21	28	25	
Main valve spring return ¹⁾						
C, D, K, Z, Y	1100	1040	860	750	680	
Main valve spring return ²⁾						
C	1100	1040	860	800	700	
D, Y	1100	1040	540	480	420	
K	1100	1040	860	500	450	
Z	1100	1040	860	750	650	
Main valve hydraulic return						Spool Z approx to 180L/min
HC, HD, HK	1100	1040	860	750	680	
HZ, HY	1100	1040	860	750	680	

Allowable flow of 3-position valve (L/min)						with pre-load valve and X port internal supply
Spool	Working pressure(MPa)					
	7	14	21	28	25	
Main valve spring return ¹⁾						
E, H, J, L, M Q, U, W, R	1100	1040	860	750	680	
G, T, H, F, P	900	900	800	650	450	
V	1100	1000	680	500	450	
Pressure centered (minimum pilot pressure 0.85MPa)						
All spools	1100	1040	860	750	680	

Notice:

When using a 4/3-way valve with pressure centered in the middle position, the pressure of the pilot oil must be 0.85MPa or higher.

1) The given flow value can be achieved when the minimum pilot pressure of 1.0MPa exists.

2) The given flow value is limiting the value at which the reset spring can return the valve when the pilot pressure decreases.

Notice:

When using a 4/3-way valve with pressure centered in the main spool which exceeds the given performance limits, a higher pilot pressure is required. Therefore, if the pressure is 35MPa and the flow is 300L/min in the circuit, the pilot pressure of 1.5MPa is required. The maximum flow of the valve only depends on the acceptable pressure drop through the valve.

Tightening torque $M_A=9\text{Nm}$ for fixing screw (16).



Tightening torque $M_A=9\text{Nm}$ for fixing screw (16).




1 Size 16
2 Size 25
3 Size 32



4WEH16...-5X/.../P4.5
4WEH25.../.../P4.5
4WEH32.../.../P4.5

01

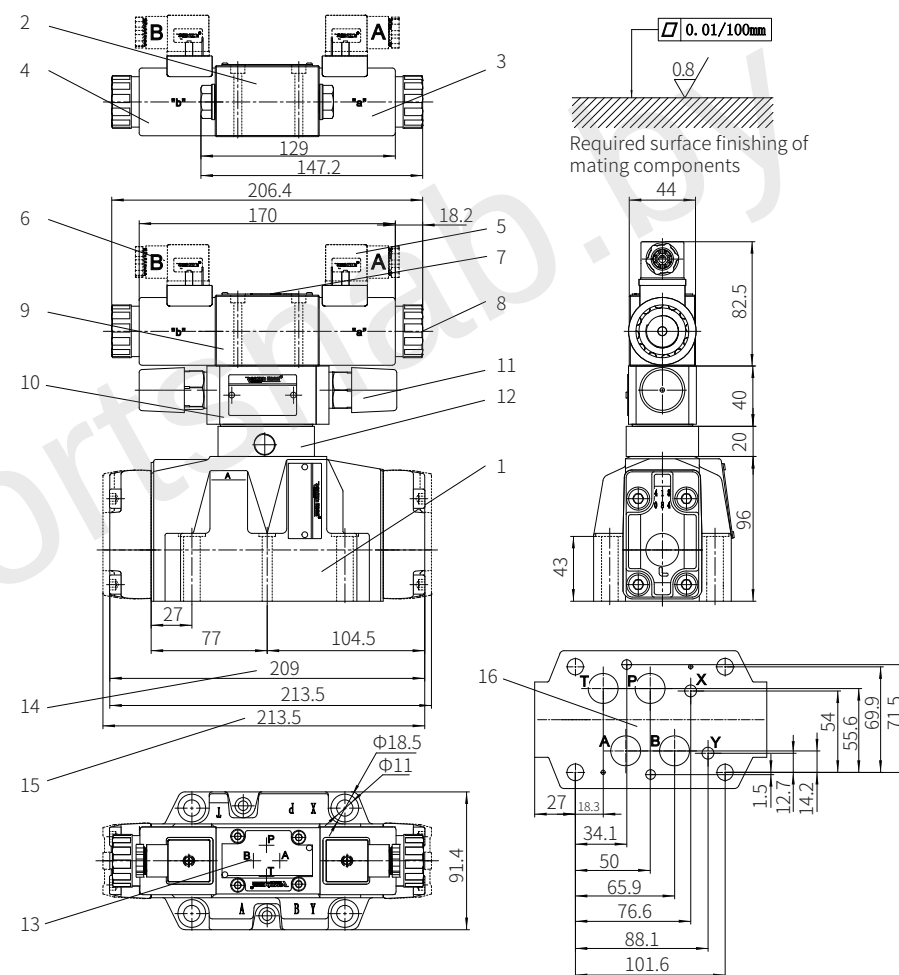

- | | |
|--|---|
| 1 Main valve | 7 Name plate of pilot valve |
| 2 2-position valve with one solenoid and plug Z4 | 8 Manual emergency operation |
| 3 Solenoid a | 9 2-position or 3-position valve with two solenoids and plug Z4 |
| 4 Solenoid b | 10 Switching time adjustment |
| 5 Gray plug (or transparent plug) | 11 Adjustment bolt |
| 6 Black plug (or transparent plug) | 12 Pressure reducing valve |
| | Valve fixing screw |
| | 2-M6x55-10.9 grade GB/T70.1-2000 |
| | Tightening torque $M_A=13.7Nm$ |



- 13 Port layout of main valve
(valve mounting surface)
14 Size of 3-position valve with spring centered
15 Size of 2-position valve with spring centered
16 Main valve connection diagram

- 4-M10x60-10.9 grade GB/T70.1-2000
Tightening torque $M_A=60\text{Nm}$

Dimension of additional devices for model WEH16

The installation range of the stroke adjustment is 10mm. The stroke limiter is used to adjust the stroke of the main spool. Loosen the lock nut and rotate the adjusting rod clockwise, the stroke of the main spool will be shortened (the adjustment must be carried out without pressure in the control chamber)


1 turn = 1.5mm stroke

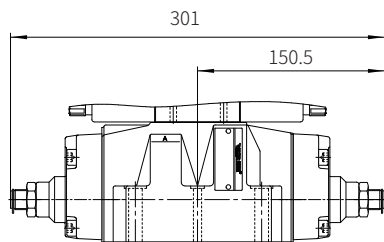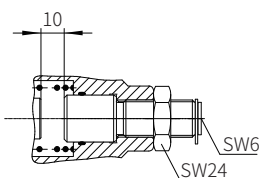

Stroke adjustment installed on the ends A and B of the main valve.../10


Stroke adjustment installed on the end A of the main valve.../11

Stroke adjustment installed on the end B of the main valve.../12

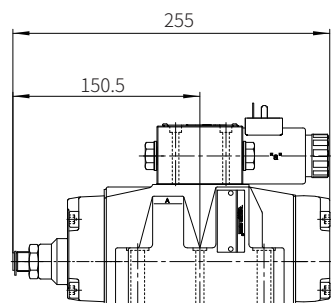

Stroke adjustment installed on the end A of the main valve.../11


(2-position valve, symbols C, D, K, Z)

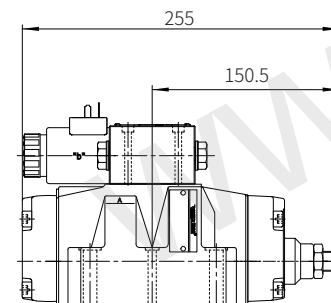

Stroke adjustment installed on the end B of the main valve.../12

(2-position valve, symbol Y)

WEH25...5XJ/...

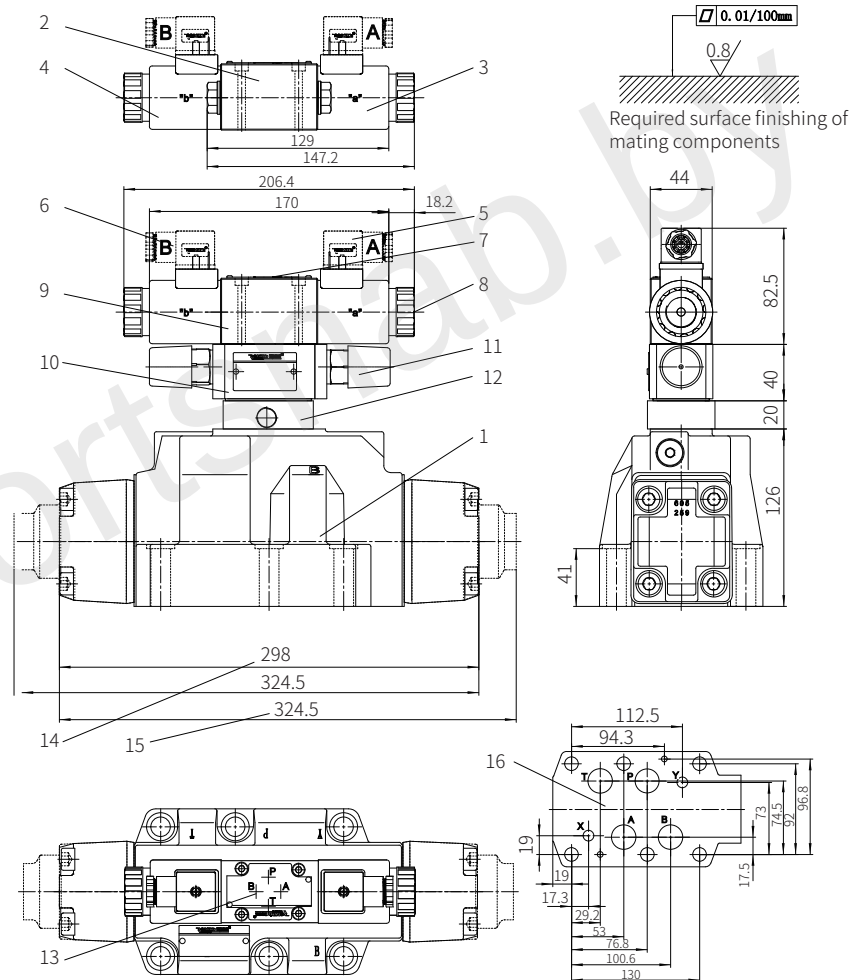

- | | |
|--|---|
| 1 Main valve | 7 Name plate of pilot valve |
| 2 2-position valve with one solenoid and plug Z4 | 8 Manual emergency operation |
| 3 Solenoid a | 9 2-position or 3-position valve with two solenoids and plug Z4 |
| 4 Solenoid b | 10 Switching time adjustment |
| 5 Gray plug (or transparent plug) | 11 Adjustment bolt |
| 6 Black plug (or transparent plug) | 12 Pressure reducing valve |


- 13 Port layout of main valve (valve mounting surface)
- 14 Size of 3-position valve with spring centered
- 15 Size of 2-position valve with spring centered
- 16 Main valve connection diagram

Valve fixing screw
6-M12x60-10.9 grade GB/T70.1-2000
Tightening torque $M_A=95Nm$



Dimension of additional devices for model WEH25

The installation range of the stroke adjustment is 12.5mm. The stroke limiter is used to adjust the stroke of the main spool. Loosen the lock nut and rotate the adjusting rod clockwise, the stroke of the main spool will be shortened (the adjustment must be carried out without pressure in the control chamber)


1 turn = 1.5mm stroke

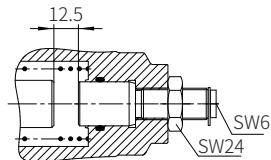

Stroke adjustment installed on the ends A and B of the main valve.../10
Stroke adjustment installed on the end A of the main valve.../11
Stroke adjustment installed on the end B of the main valve.../12

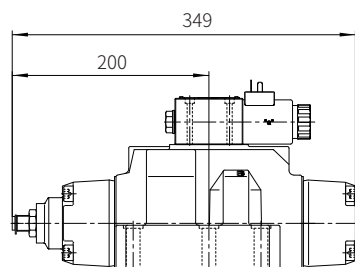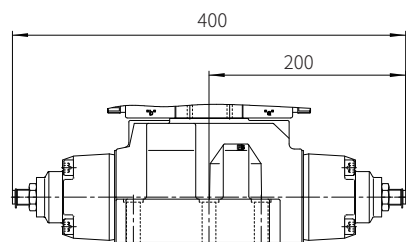


Stroke adjustment installed on the end A of the main valve.../11
(2-position valve, symbols C, D, K, Z)

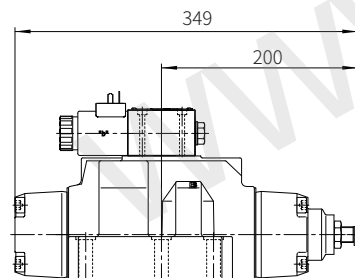

Stroke adjustment installed on the end B of the main valve.../12
(2-position valve, symbol Y)

WEH32...5XJ/...

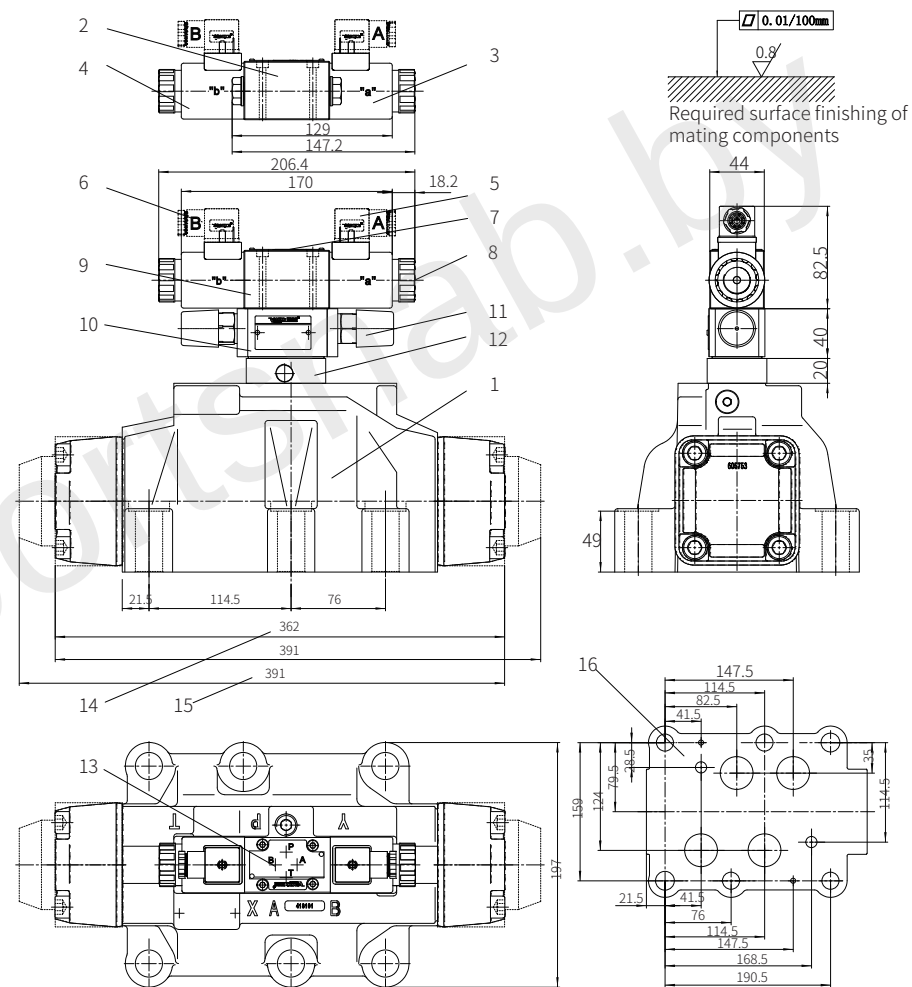

- 1 Main valve
- 2 2-position valve with one solenoid and plug Z4
- 3 Solenoid a
- 4 Solenoid b
- 5 Gray plug (or transparent plug)
- 6 Black plug (or transparent plug)
- 7 Name plate of pilot valve
- 8 Manual emergency operation
- 9 2-position or 3-position valve with two solenoids and plug Z4
- 10 Switching time adjustment
- 11 Adjustment bolt
- 12 Pressure reducing valve



- 13 Port layout of main valve (valve mounting surface)
- 14 Size of 3-position valve with spring centered
- 15 Size of 2-position valve with spring centered
- 16 Main valve connection diagram

Valve fixing screw
6-M20x80-10.9 grade GB/T70.1-2000
Tightening torque $M_A=373\text{Nm}$

Dimension of additional devices for model WEH32

The installation range of the stroke adjustment is 15mm. The stroke limiter is used to adjust the stroke of the main spool. Loosen the lock nut and rotate the adjusting rod clockwise, the stroke of the main spool will be shortened (the adjustment must be carried out without pressure in the control chamber)


1 turn = 1.5mm stroke

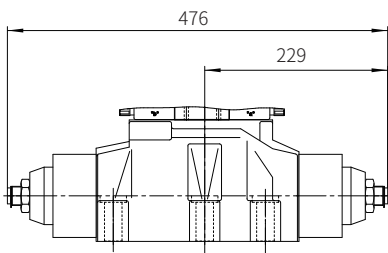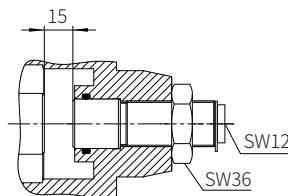

Stroke adjustment installed on the ends A and B of the main valve.../10


Stroke adjustment installed on the end A of the main valve.../11

Stroke adjustment installed on the end B of the main valve.../12

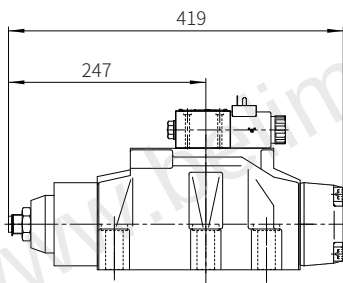

Stroke adjustment installed on the end A of the main valve.../11

(2-position valve, symbols C, D, K, Z)

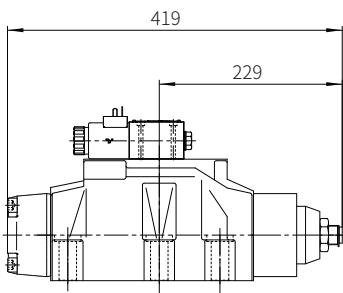

Stroke adjustment installed on the end B of the main valve.../12

(2-position valve, symbol Y)